

Operation Manual CRY-MBVI-R0500



1) Power Connection



System starts automatically when power is supplied and plays the files on the internal memory in endless operation.

2) Copying Content



Load the content onto a standard USB Flash Memory (without folders and .trash filesbest with a Windows PC) and plug it into the micro USB socket with the enclosed USB adapter. Video resolution 1080x1080 pixels, video format .mp4, Codec H264, Bitrate approx. 10 Mbit/sec.

Confirm the following message with the remote control (OK button):



The following message should be displayed during the copying process:



After the copying process, the following display appears:



You can now switch off the power, pull the USB stick out of the socket and continue at **Point1.**

3) Synchro-Operation

The system allows synchronisation of multiple devices. To do this, the following settings must be made: First carry out the copying process according to **Point2** on each unit individually.



a) Settings in the OSD Menu with the remote Control unit:

Set the "PlayMode" on one unit at a time to Master and on the remaining units to Slave. After that, all that is needed is the correct cable connection and the units synchronise automatically when power is supplied.



Yellow plug for the « master »

blue plug for the „Slavers“

Disconnect the power plug from the master display again. After that, both units should play the content synchronously..